

ADL RXO Developer's Kit Getting Started Guide

1. Plug the ADL RXO module into the I/O-test board's 20-pin connector
2. Secure the module to the I/O-test board using the provided screws
3. Attach the antenna cable to the ADL RXO module
4. Attach one of the two antennas (whichever matches your licensed frequency) to the antenna cable
5. Attach the PC interface cable to the I/O-test board's 9-pin UART connector (see diagram below)
6. Attach the PC interface cable to a serial port on your PC
7. Attach the wall cable to the AC/DC adapter and select the proper plug from the adapter kit
8. Attach the AD/DC adapter's tubular plug to the power jack on the I/O-test board
9. Plug in the ADLCONF (Dealer's Version) USB key on your PC
10. Insert the ADL RXO Developer's Kit CD in your PC and run ADLCONF_setup.exe to install ADLCONF software. Do not launch the program yet.
11. Browse to C:\Program Files\Pacific Crest Corporation\ADLCONF and double-click "Sentinel System Driver Installer.exe" to install the USB key driver
12. Launch ADLCONF and refer to its user guide for instructions on connecting to the ADL RXO module

