



Using Pacific Crest Data/Power Cables

March 2010

Pacific Crest offers a variety of data/power cables for use with their radios. Most of these cables use circular male plugs that lock into female receptacles as shown in the figure below. The locking mechanism ensures a tight, water-resistant connection and prevents the cable from disconnecting from the radio.



Pacific Crest Data/Power Cable

When you insert your cable into the radio, you should line up the red dot on the plug with the top of the receptacle. Some Pacific Crest radios have red lines on the top of the receptacle.

When you wish to remove the cable from the radio, hold the cable stationary and pull back on the plug's outer sleeve. This disengages the locking mechanism built into the plug, allowing you to remove it from the receptacle. Pulling the plug out of the receptacle without first disengaging the locking mechanism can damage the connector or cable.